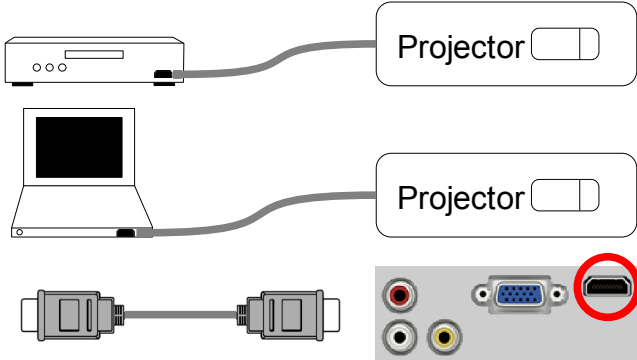 
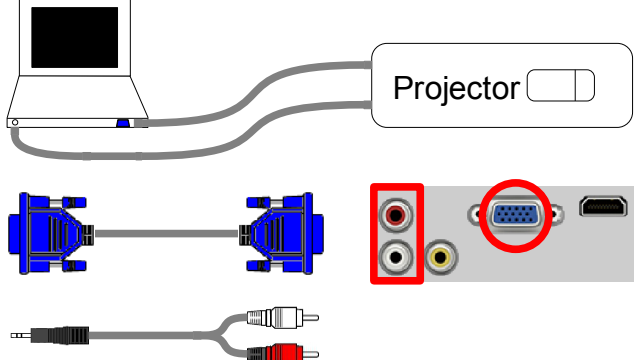 


Longhorsley Village Hall Projector and Amplifier Connections



Connecting just to the projector

The projector has HDMI, phono, VGA and S-Video inputs. It has a built-in 5W speaker suitable for a small audience. For large audiences you may want to use the amplifier with its two 100W speakers.

<p>If your device has HDMI</p> <ul style="list-style-type: none"> • Connect the HDMI output to the HDMI input. ✓ An HDMI lead is available. 	<p>Connecting a VGA laptop</p> <ul style="list-style-type: none"> • Connect the VGA output to the VGA input. ✓ A VGA lead is available. • To use the speaker, connect the headphone socket to the red & white phono inputs on the projector. ✓ A 3.5mm jack to twin phono lead is available. 
---	--

Connecting to both the projector and the amplifier

The amplifier has four channels with XLR3/6.35mm jack inputs and one phono input. A microphone is available and this uses one of the four channels. A HDMI Audio Extractor is available to connect a device with HDMI to the amplifier.
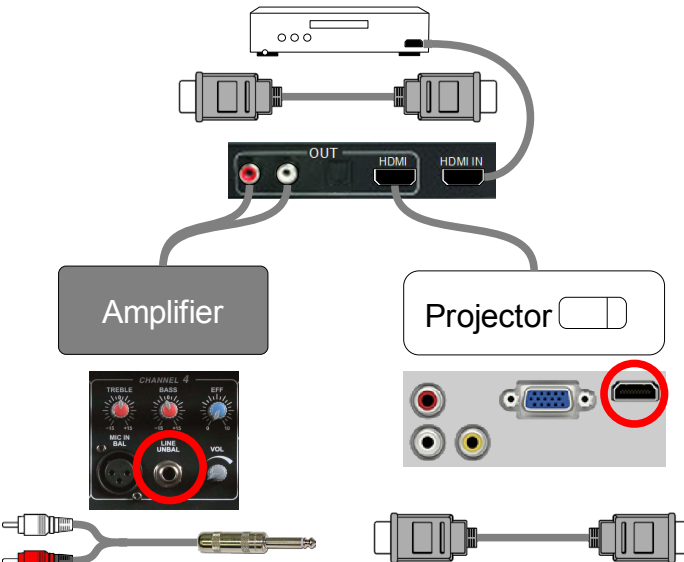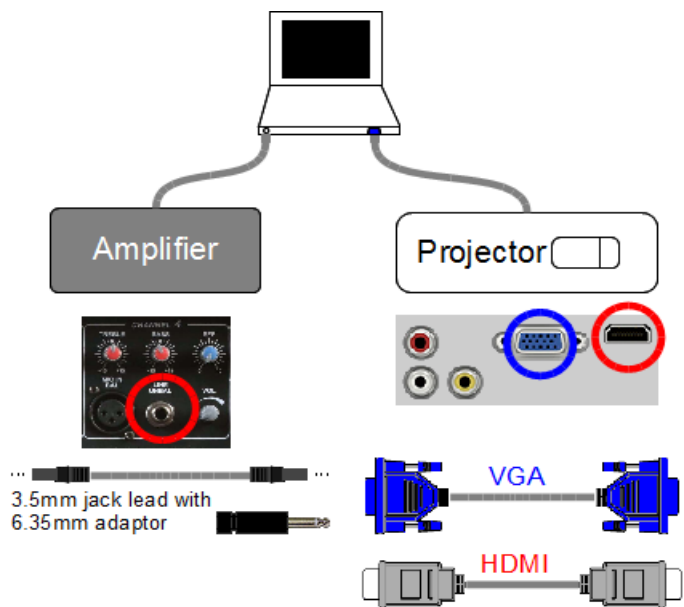
<p>If your device has HDMI</p> <ul style="list-style-type: none"> • Connect the HDMI output from your device to the HDMI IN on the HDMI Audio Extractor. • Connect the HDMI OUT from the HDMI Audio Extractor to the HDMI input on the projector. ✓ Two HDMI leads are available. • Connect the phono OUT from the HDMI Audio Extractor to a jack socket on the amplifier. ✓ A phono to 6.35mm jack lead is available. • You may want to mute the projector's sound. 	<p>Connecting a laptop</p> <ul style="list-style-type: none"> • Connect the HDMI or VGA output from your laptop to the projector's HDMI or VGA input. ✓ HDMI and VGA leads are available. • Connect the headphone socket to a jack socket on the amplifier. ✓ A 3.5mm jack lead and a 3.5mm to 6.35mm adaptor are both available. 
--	---

Longhorsley Village Hall Projector and Amplifier Operation


Setting up the screen

1. Turn the feet on the base of the screen to steady it.
 2. Fit the upright support into the back of the base of the screen.
 3. Pull the screen up and hook it over the upright support.
 4. Extend the upright support to it's full height.
 5. Be careful not to catch your fingers in the screen when you lower it.
-

Operating the Projector

Manual Controls

1. A/V mute slide
2. Focus ring
3. Image size adjuster
4. Horizontal keystone adjuster

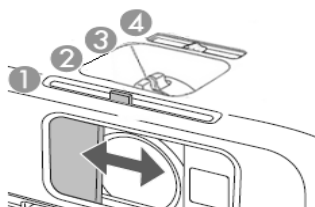

Operation


1. Turn off the equipment you want to connect before connecting to the projector otherwise you could cause the projector to malfunction.
2. Connect the cables from the source to the projector first.
3. Then connect the power cord to the projector, turn on the projector and open the A/V mute slide at the front of the projector - Manual Control ①
4. Turn on your input device.

When using a laptop computer, you may need to change it's screen output.

The method for changing differs depending on the computer being used.

See the documentation supplied with your computer.

5. If the image is not projected, press the [Source Search] button - Control Panel ①
6. The projector has automatic vertical keystone adjustment.

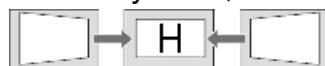

If you need to adjust the horizontal keystone, use the manual adjuster - Manual Control ④

7. The focus ring, image size adjuster and the volume controls are self-explanatory.
8. To turn the projector off, press the power button twice.

You don't have to wait for it to cool down before you put it away.

Operating the amplifier

1. Turn off the equipment you want to connect before connecting to the amplifier.
This will prevent any pops, clicks or bangs that could damage either the speakers and/or damage the mixer amplifier.
 2. Connect the cables from the source to the amplifier first.
 3. Then connect the power cord to the amplifier.
 4. Each channel has it's own VOL control. The phono volume control is labelled CD/TAPE and can be found to the left of the MASTER volume control.
-

Connecting the speakers

Use the 6.35mm jack speaker cables provided to connect the SPEAKER outputs on the amplifier to the INPUT sockets on the speakers. Alternatively, you can daisy-chain the speakers - connect one speaker to the amplifier and then connect the OUTPUT of the first to the INPUT of the second.

Further information

A Quick Start Guide for the projector and full User Manuals for the amplifier and HDMI Audio Extractor are available with the equipment.

These, and the full User Manual for the projector, are available on the Village Hall webpage.